



Ricoh Shotmaster 130Z Battery Replacement

How to correctly change the batteries of the Ricoh Shotmaster 130Z.

Written By: tcalvin12



INTRODUCTION

How to correctly change the batteries of the Ricoh Shotmaster 130Z.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:

- [2 AA Batteries](#) (1)
-

Step 1 — Battery



- First, make sure that the camera is turned off. The dial must line up the word "off" with the white tally mark.

Step 2



- You can find the battery compartment on the side of the camera. Search for the arrow and the abbreviation "BATT"
- Stick your finger nail (or a blue opening tool if you wish) in the notch and flip open the door to expose the battery compartment.

Step 3



- The yellow latch holds down an extra cover for the batteries
- Push on it in to open the compartment
- Insert batteries according to the charges marked on the inside part of the cover

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 03:12:38 AM.